

HIDDEN[®]

GLASS

隐藏式滑动系统



适用于无框玻璃门



↑ 微信扫一扫观看安装教程



SISTEMI DI SCORRIMENTO I SLIDING SYSTEMS

KIT 1800-1150 V - MAX 80 KG
KIT 1800-1150/40 V - MAX 40 KG

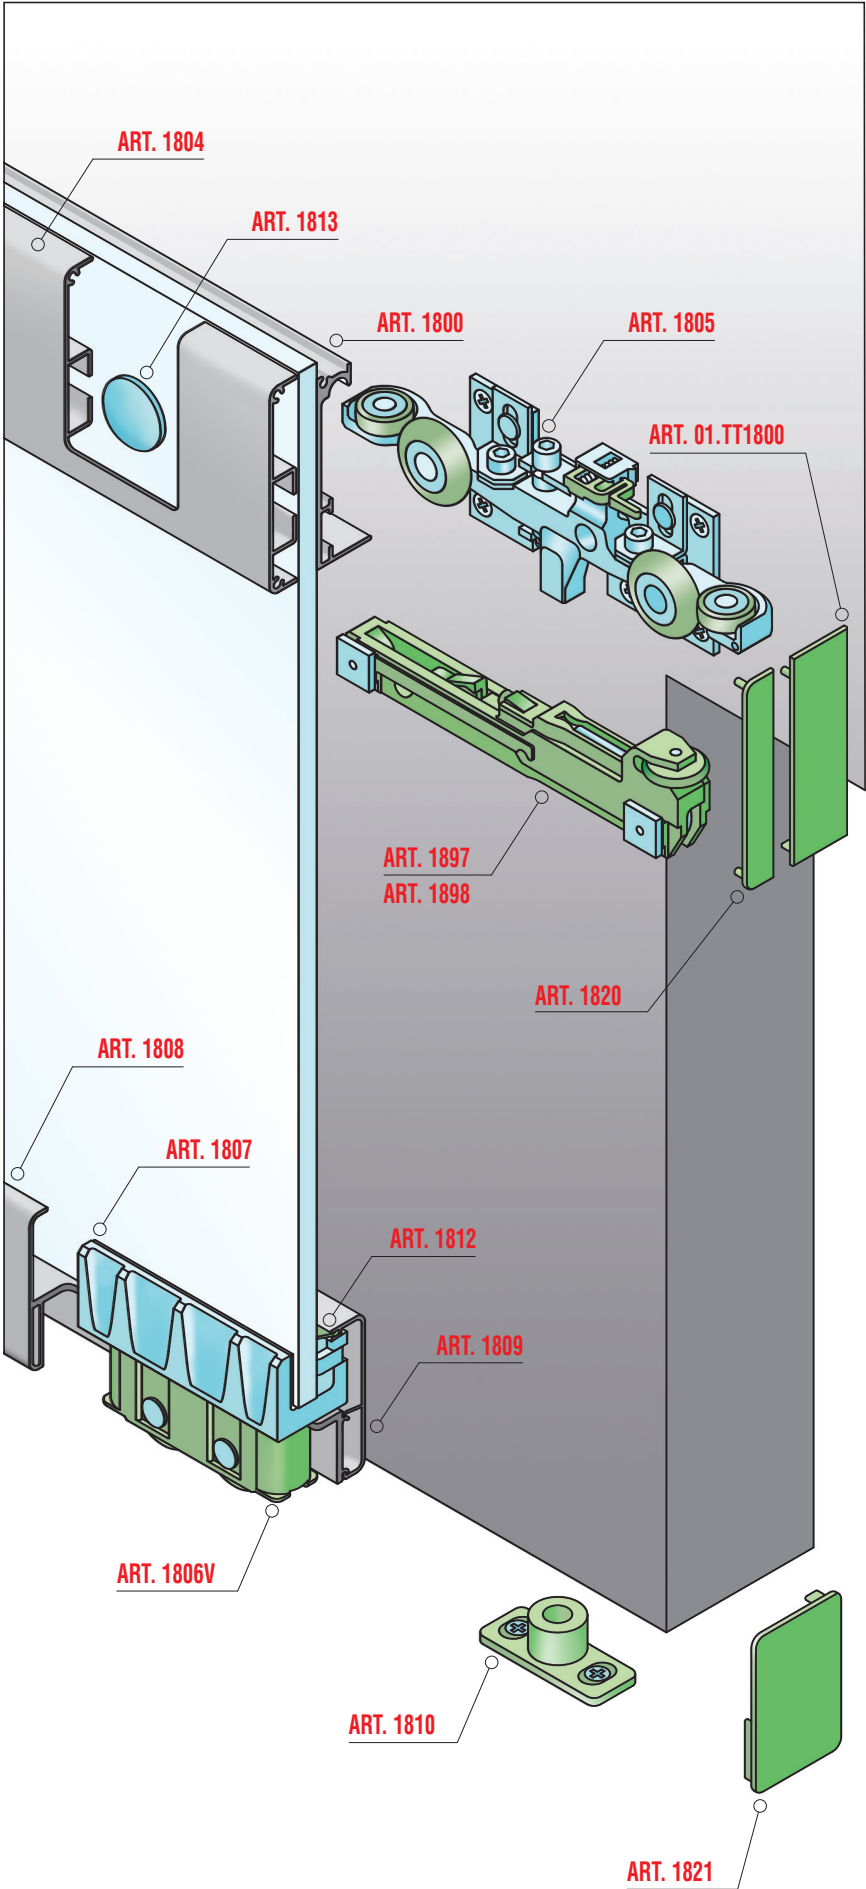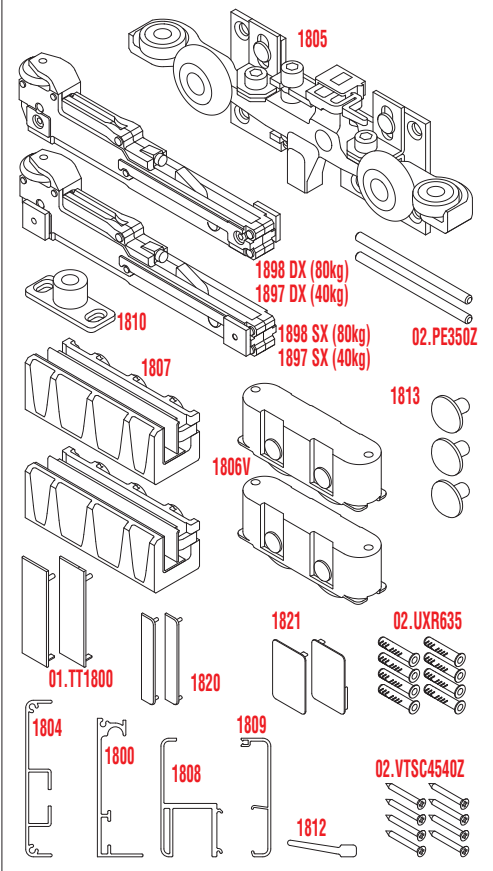


配件明细


1805	Guida superiore regolabile Adjustable upper truck
02.PE350Z	Perno Pin
1898 DX-SX	Decelerante DX-SX (80kg) Soft Closing Stopper R-L (80kg)
1897 DX-SX	Decelerante DX-SX (40kg) Soft Closing Stopper R-L (40kg)
1810	Guida inferiore Lower runner
1806V	Carrello inferiore Vetro Glass Lower truck
1807	Pinza Vetro Glass Clamp
1813	Borchia Vetro Glass Stud
01.TT1800	Tappo terminale End cover
1820	Tappo terminale End cover
1821 DX-SX	Tappo Terminale DX-SX End Cover R-L
02.UXR635	Tassello Dowel
02.VTSC4540Z	Vite 4.5x40 Screw 4.5x40
1812	Labbro Parapolvere L=1150mm Dust Lip L=1150mm
1800	Profilo superiore L=1150mm Upper profile L=1150mm
1808	Profilo inferiore L=1150mm Lower profile L=1150mm
1809	Copertura inferiore L=1150mm Lower Cover L=1150mm
1804	Copertura superiore L=1150mm Upper Cover L=1150mm

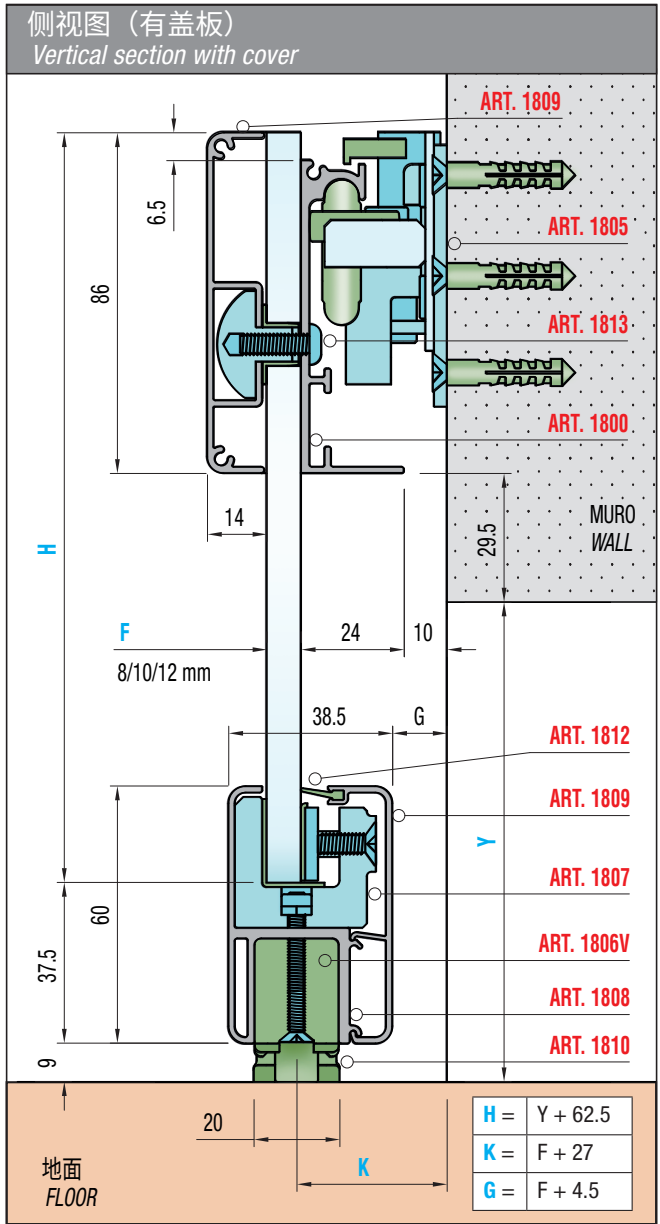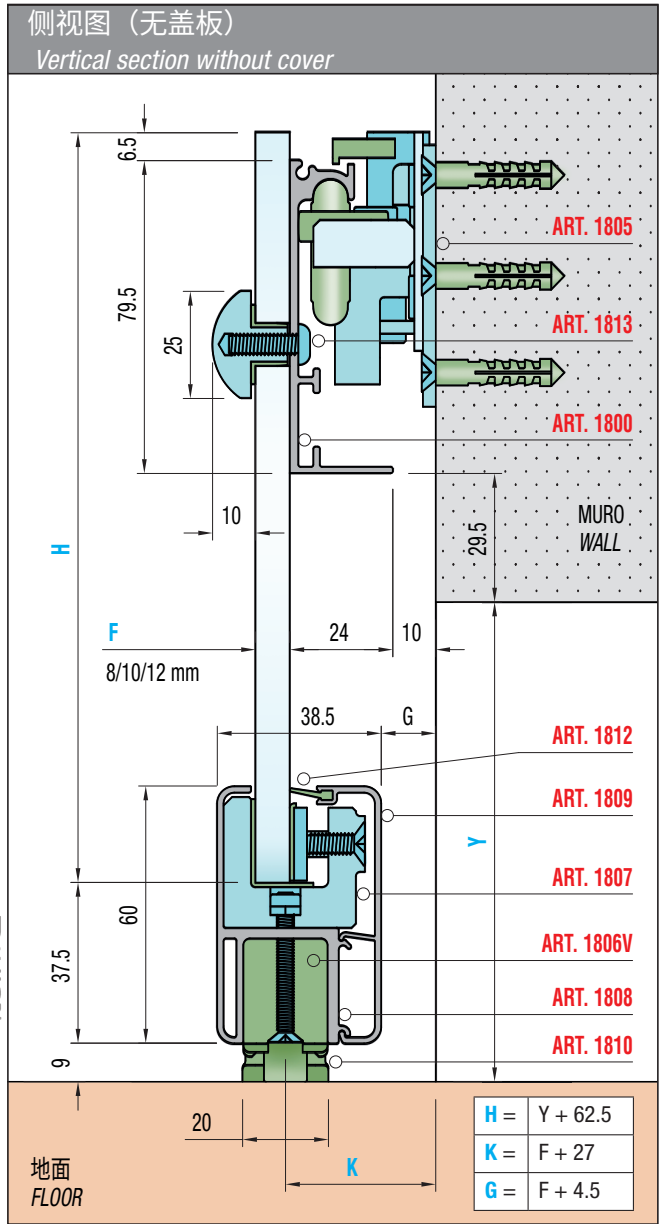


玻璃开孔图 / Glass door drilling

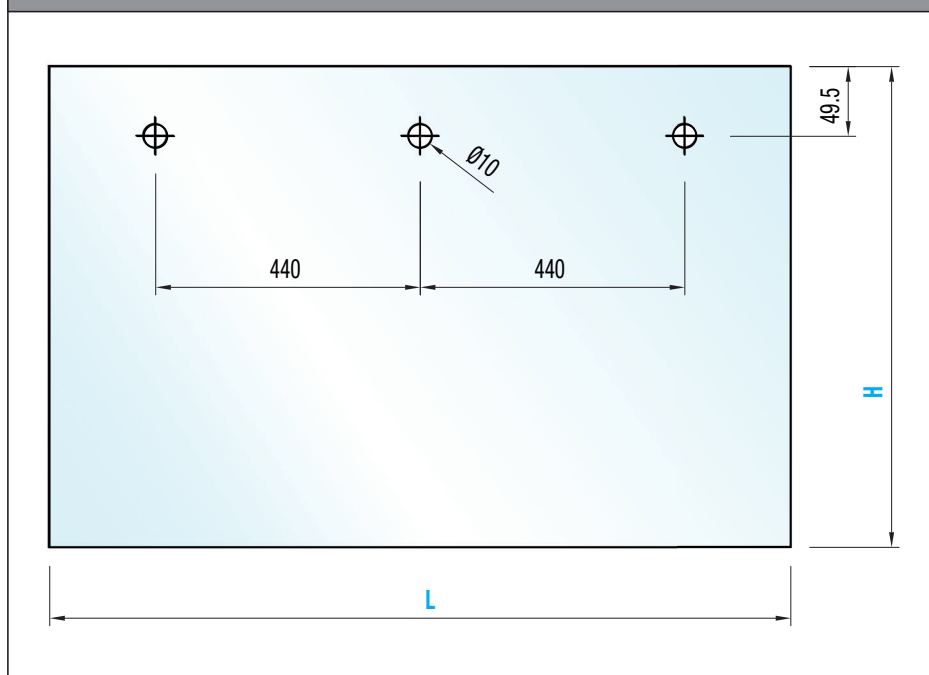


左开门示意图

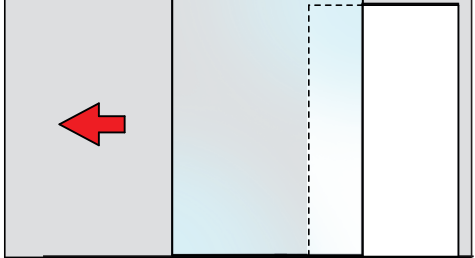

右开门示意图

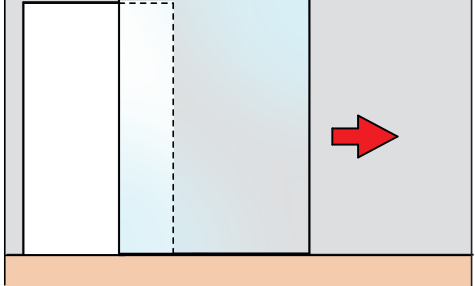


标准尺寸图 - 门洞完全外露
Standard dimensions for door with complete doorway opening

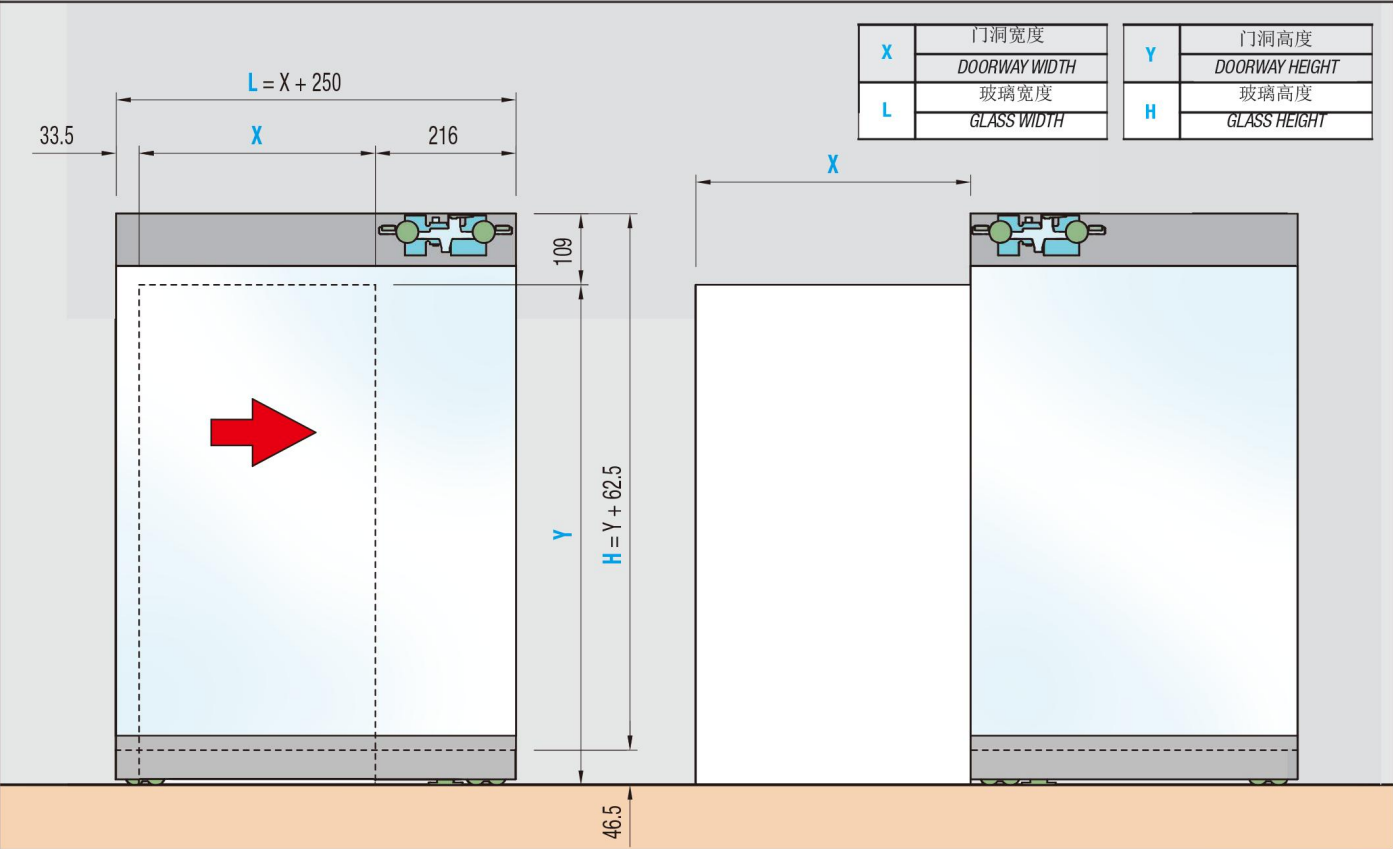


4


标准尺寸图 - 门洞部分遮挡
Standard dimensions for door with partial doorway opening

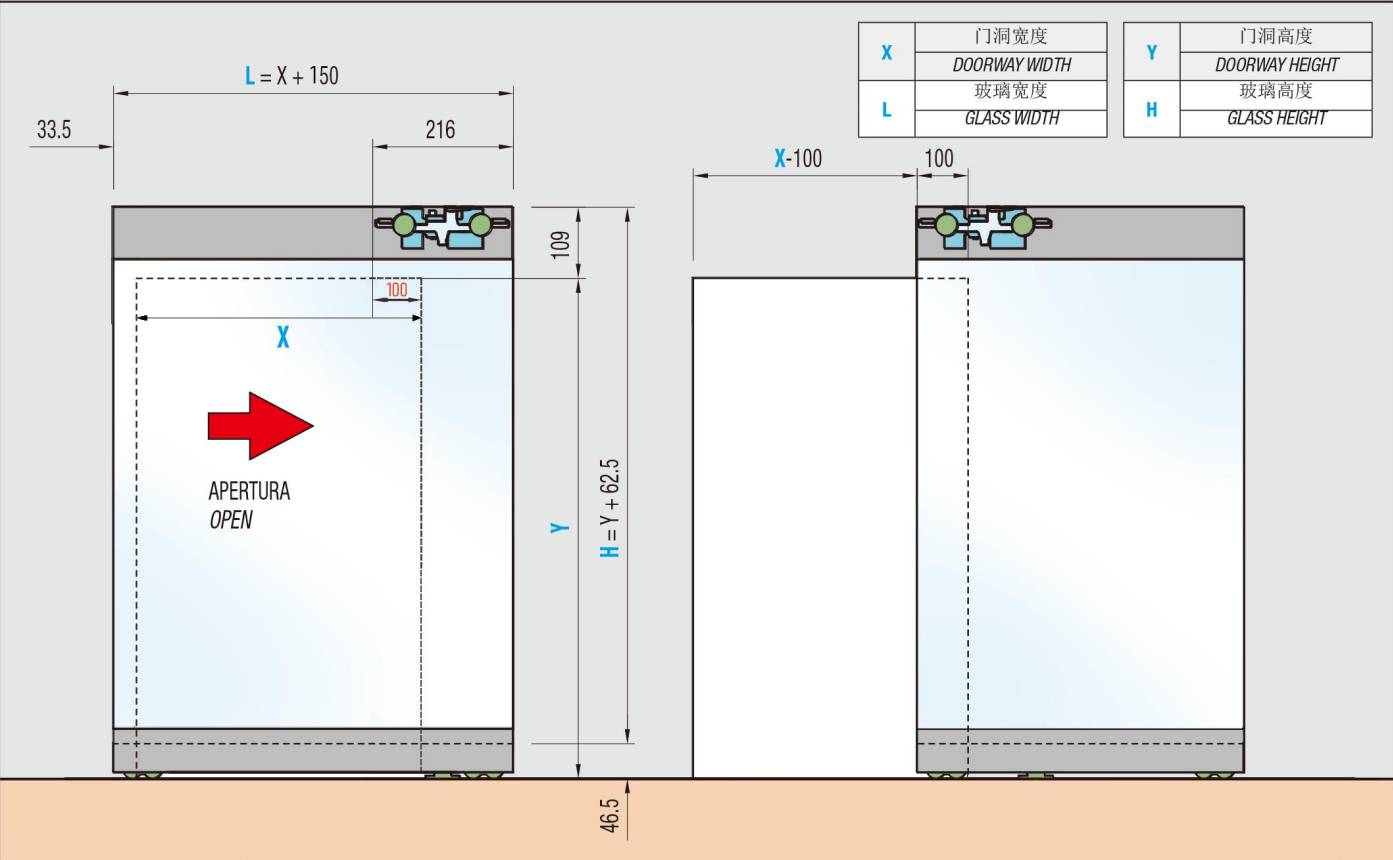

上下导轨位置 / Upper and lower guide position

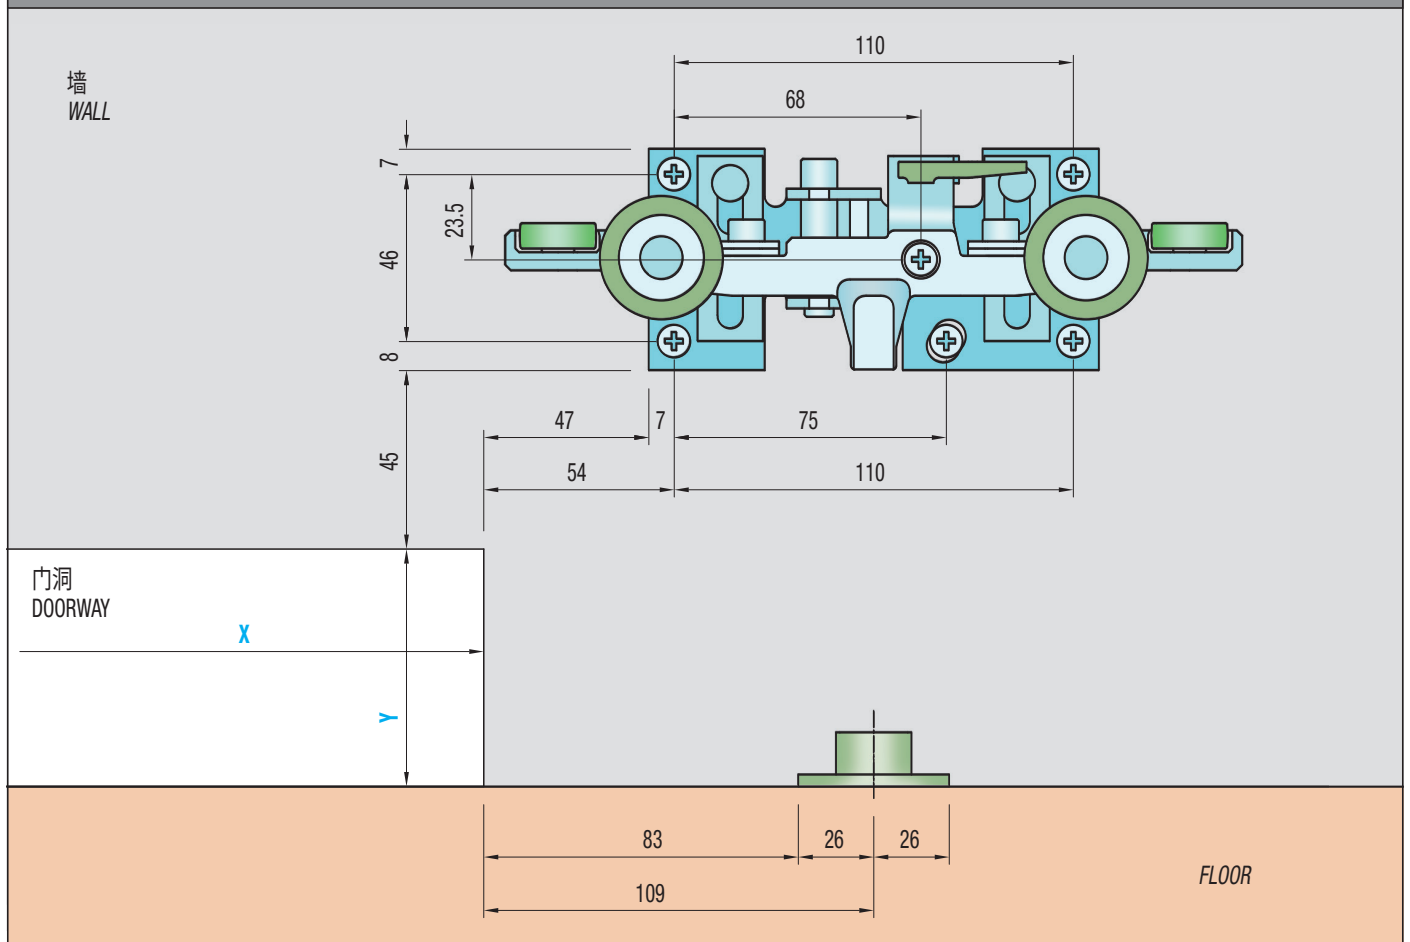


双向阻尼缓冲位置 - 完全开启/ *Soft closing position for complete opening*

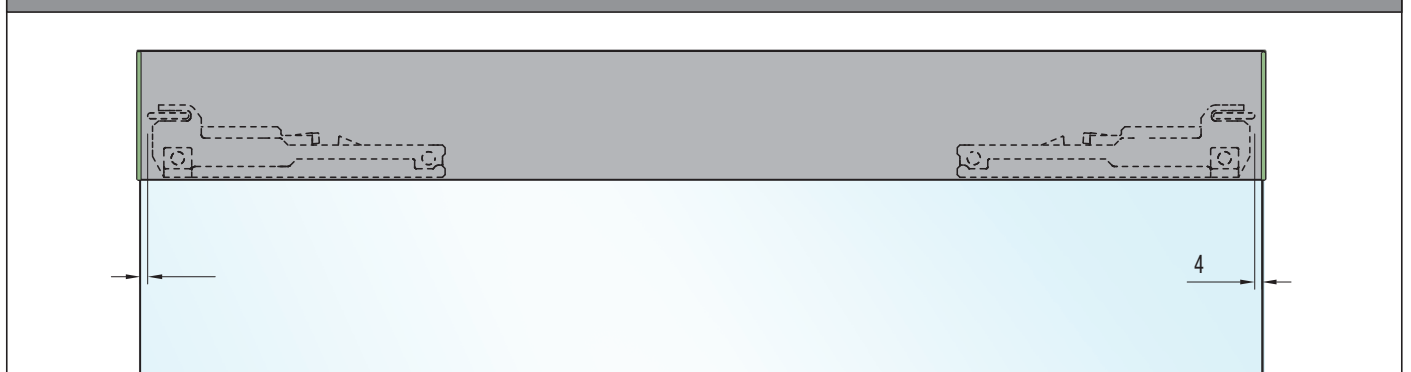

双向阻尼缓冲位置 - 部分开启 / *Soft closing position for partial opening*




自激活装置 / Automatic self activating device

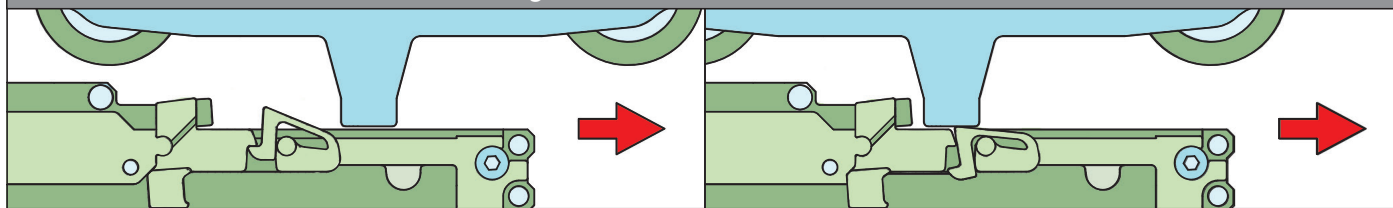

调节指导 / Assembly instructions


①

将上导轨的中心与门的中心线对齐，如下图所示，检查防脱扣是否被激活。
Fit the center line of the door close to the upper truck previously fastened to the wall. Check that the clasp is not triggered, as shown in the figures below.

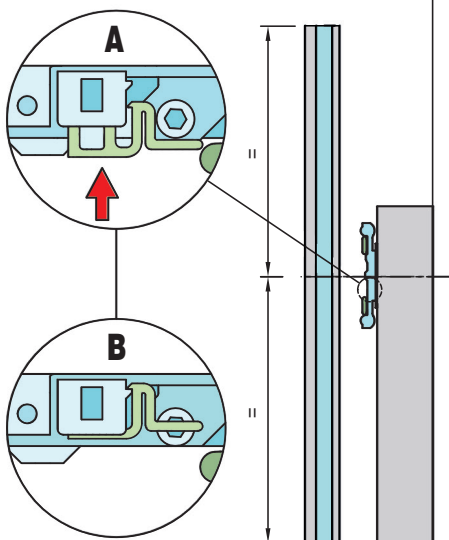


②

固定下滚轮ART.1810，将门装在上导轨。
Position the door astride the runner ART. 1810 lying the lower wheels on the ground.

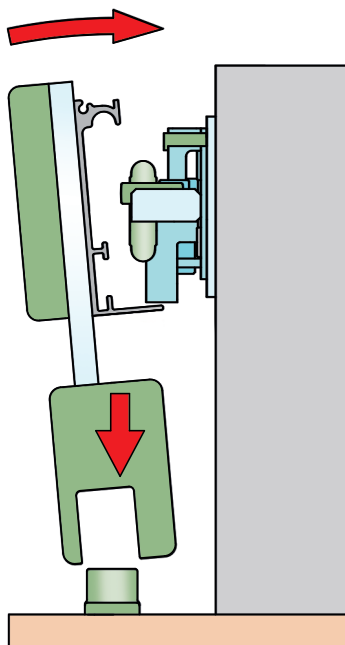


③

通过使型材靠在上支架的滚轮上，使门处于垂直位置。将门一直压在上支架上，直到组装结束。
Put the door in a vertical position, placing its profile on the wheels of the upper truck. Keep the door pushed against the upper truck till the end of the assembly.

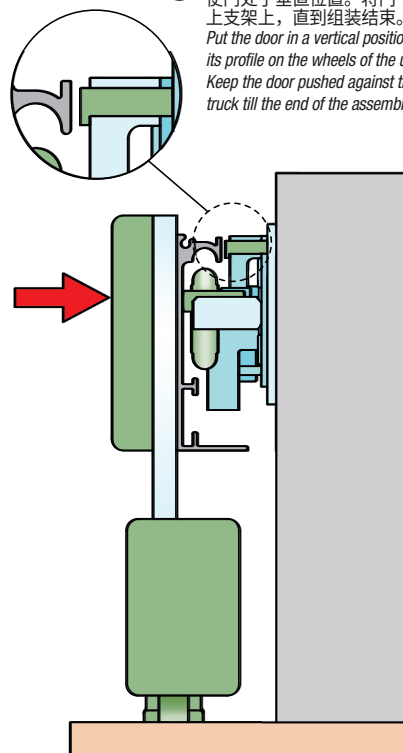


6

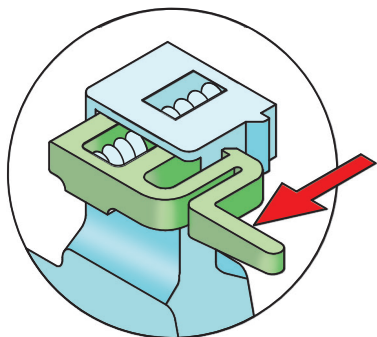


④

拉开防脱扣
Pull the lever of the clasp.

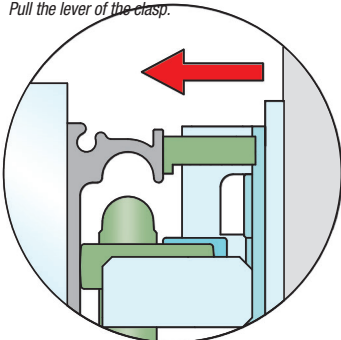



⑤

防脱扣自动放在上部型材上。
The clasp will automatically lie on the upper profile.

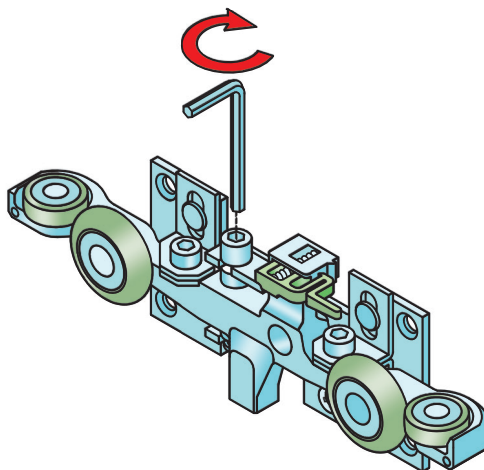



⑥

拧紧壁挂支架的高度调节螺丝。
Fasten the screw for the adjustment of wall bracket height.
向上拧摇杆，使滚轮靠近型材。
The rocker arm rises, moving the wheels closer to the profile.
当防脱扣发出“喀哒”声时，停止拧紧。
When the clasp makes a loud "Click", stop fastening.

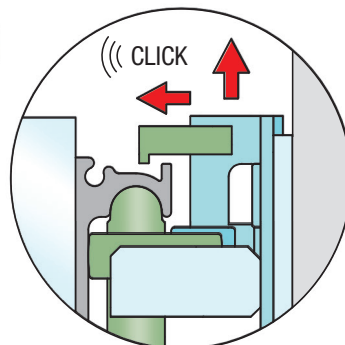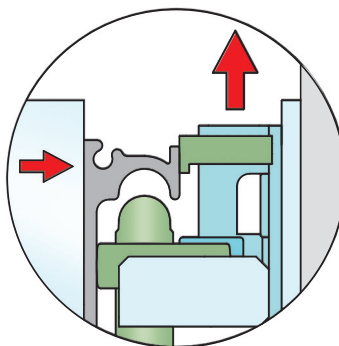

门与墙平行调整 / Door/Wall alignment adjustment


7

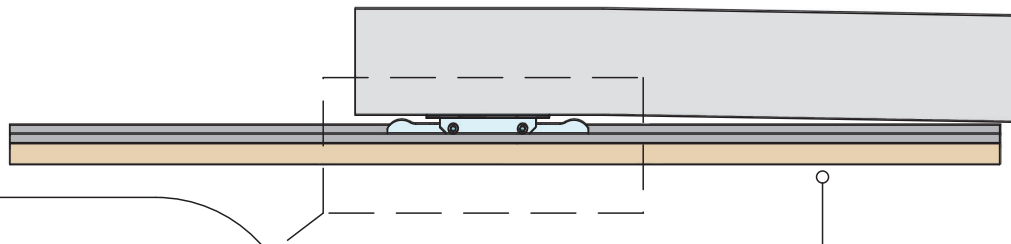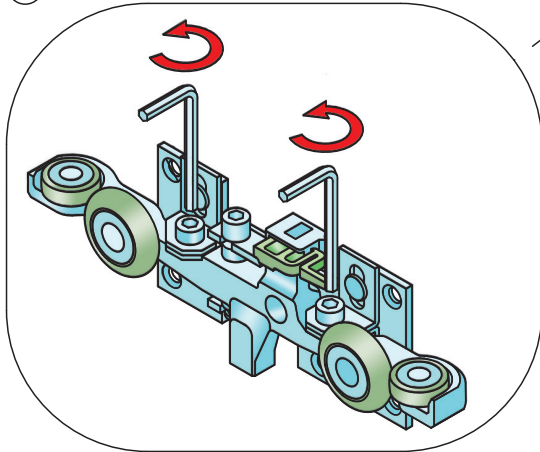

如果门与墙不平行，则松开两个螺丝。



IF THE DOOR IS NOT ALIGNED WITH THE WALL
LOOSEN THE FIXING SCREWS

8

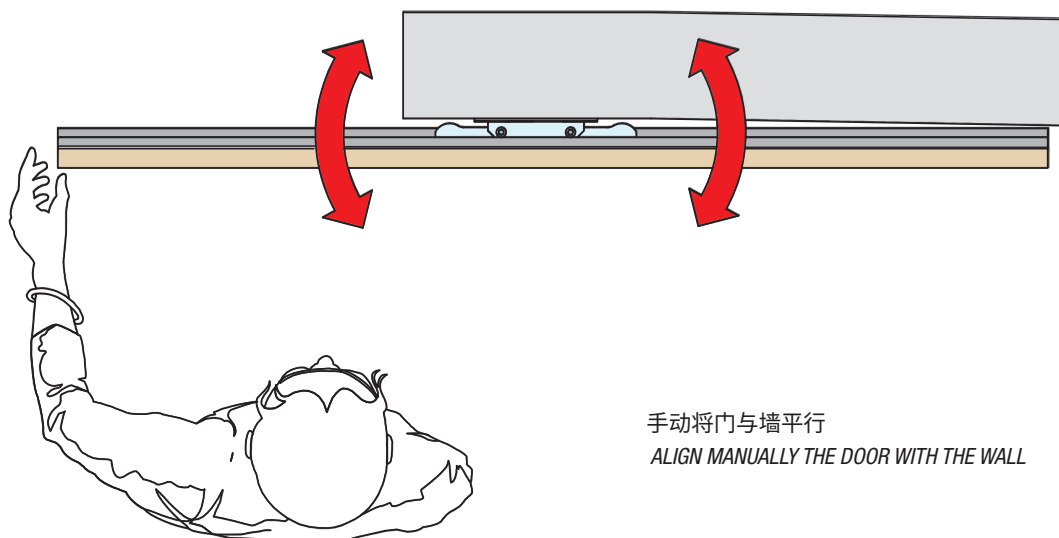

手动将门与墙平行
ALIGN MANUALLY THE DOOR WITH THE WALL

9

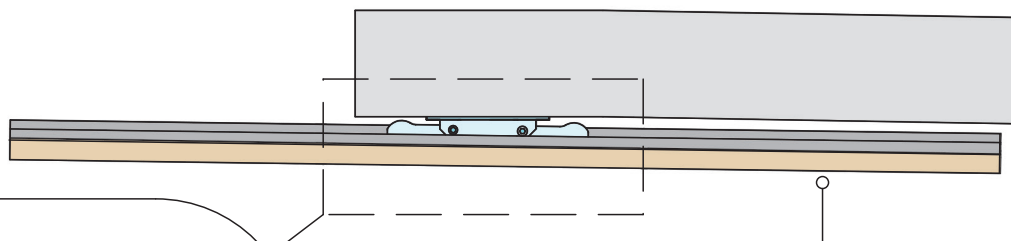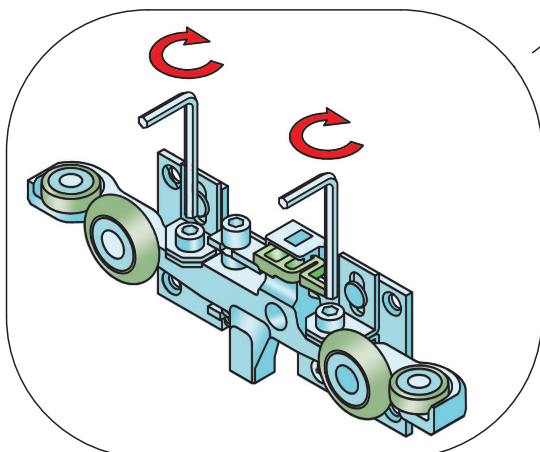

拧紧两个固定螺丝

LOCK THE ALIGNMENT SCREWING THE FIXING SCREWS



购买咨询

北京中意信诚贸易有限公司

TEL : 13910114747 (微信同号)

WEB: www.china-era.com